

# NATURE'S HEAD®

## Installation Guide- Urine Diverting Bottle

### 1 Remove Old Bottle



Undo latch on each side of toilet. Lift bowl up, slide bowl off of hinge. Lift bottle out of bottle holder.

Congratulations on the purchase of your new Nature's Head urine Diverting Kit. This kit can be installed on any of the full-size Nature's Head Toilets, but will NOT fit our Weekender Toilet. If installing on an existing toilet, follow the the instructions below.



### 3 Place New Bottle Holder in Place



Place new Bottle Holder in front of base and align the holes with the three brass inserts in base. Carefully thread each screw into inserts by hand. Tighten each screw evenly with screw driver until tight.

### 2 Remove Bottle Holder



Remove three phillips head screws that secures the holder to the base. Set screws aside for later use.

### 4 Install New Bottle




Set new Urine Diverting Bottle into the new bottle holder. Return the bowl to the hinge, lower bowl and and close latch on each side of toilet.

- Ensure the toilet is sitting on flat, level surface when installing NEW Bottle Holder to prevent uneven installment and wobbling of the toilet.
- The Drain Hose can be routed either straight down, or at an angle going along the side of the toilet towards the back of the toilet, and then to the Holding Tank.

# NATURE'S HEAD®

## Installation Guide- Urine Diverting Bottle

### 5 Inspect Bottle Seal

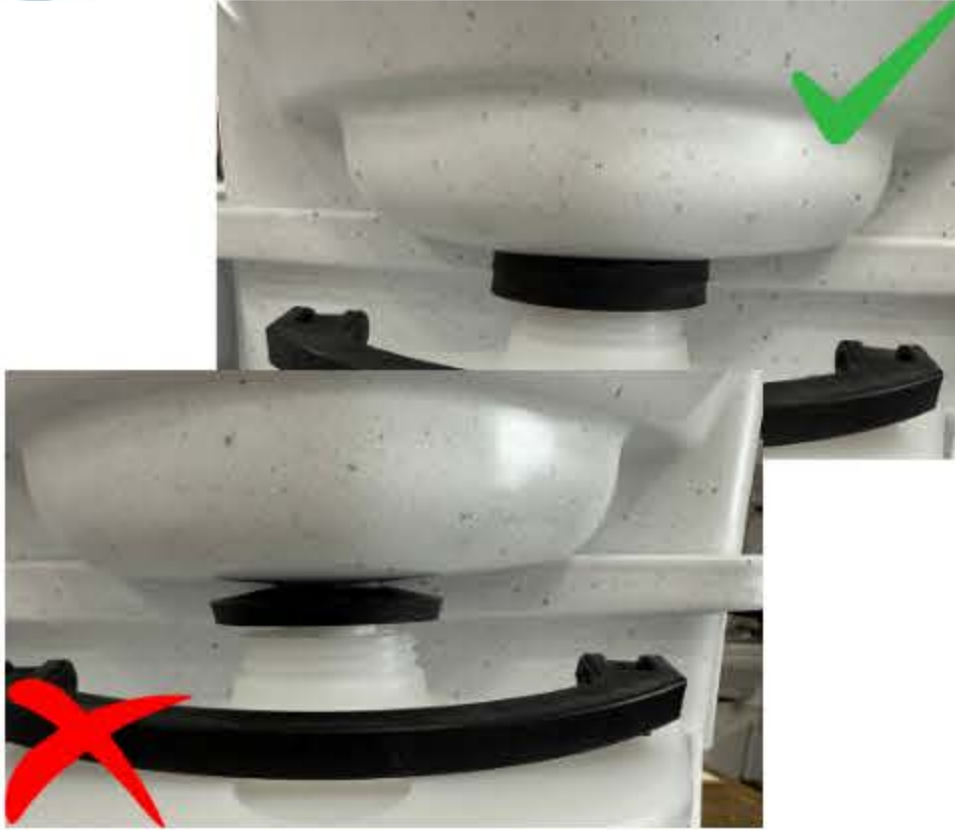

Check that the Round Bottle Seal has adequate contact with the bottle

### QUICK TIPS

- Check that the seal is adequate: check with the bowl latched on each side and gently twist the urine bottle from side to side to ensure there is some resistance.
- You can also observe where the bottle seal contacts the urine bottle. If there is a gap, you will add a second bottle seal in addition to the existing one.
- We recommend starting with one bottle seal and adding a second one if necessary.
- A second bottle seal is provided with the kit and slides onto the urine drain spout on the front of the bowl.
- Toilets we have checked have required two bottle seals, but older units may not require two.
- Ensure the hose is cut off square. If cut at an angle, it will not seal properly when inserted into fitting.
- To remove hose from fitting, push the collar at the end of the fitting towards the fitting until it touches and pull the hose out while keeping the collar pressed against the body of the fitting.

### 6 Inspect Brass Fitting



Comes with a Brass Swivel Fitting already installed. The fitting is a Push Lock Fitting, meaning no clamps are required. Simply push end of hose into fitting until it bottoms out (approximately 1 inch)

# NATURE'S HEAD®

## Installation Guide- Emptying the Solids Chamber with the New Diverter Installed

---

# 1

To empty the solids chamber, simply unlatch the Bowl section. Lift the Bowl enough to install the Bottle Cap on the Urine Bottle. Then lift the Urine Bottle out of the Holder and set aside.



- **DO NOT** remove the hose from the Urine Bottle. With the cap in place, this is a sealed assembly and can even be set on its side without leakage.
- By converting to a Urine Diverting System, you are transitioning back to a Holding Tank System. Even though the solid wastes remains separate and can be stored for extended periods of time, Urine stored over time will produce odors.
- We recommend when you are leaving the Toilet for extended periods (not in constant use) that you pour a cup of water, or water mixed with a Urine Neutralizer (such as Vinegar or Urine Digester) into the Urine drain hose in the bowl (or directly into the Urine Bottle). This will flush any residual Urine from the Bottle and hose to help keep your Holding Tank System odor free.
- The drain hose supplied with the kit is a durable, non permeating material designed to give you years of service. This hose can be stiff, especially when cold. Place the hose in the sun or warm water to aid in shaping if necessary.

# 2

Once the Solids Chamber has been emptied, simply place it on the floor in between the floor mounting brackets. Set the Urine Bottle back into the Bottle Holder, ensuring to remove the Urine Bottle Cap once correctly seated into the Holder.