

NATURE'S HEAD®

Installation Guide

Urine Diverting Bottle

1 Remove the Old Bottle



Undo the latch on each side of the toilet. Lift the bowl up, slide the bowl off of the hinge, and lift the bottle out of the bottle holder.

3 Place the New Bottle Holder in Place



Place the new bottle holder in front of the base and align the holes with the 3 brass inserts on the front of the base. Carefully thread each screw from the previous bottle holder into the inserts by hand. Then tighten each screw evenly with a screwdriver, until tight.

Congratulations on the purchase of your new Nature's Head Urine Diverting Kit. This kit can be installed on any of the full-size Nature's Head Toilets, but will NOT fit our Weekender Toilet. If installing on an existing toilet, follow the instructions below.



QUICK TIPS

- Ensure the toilet is sitting on a flat, level surface when installing the NEW Bottle Holder to prevent uneven installment and wobbling of the toilet
- The drain hose can be routed two ways. Straight down, or at an angle going along the side of the toilet to the back and directly to your holding tank.
- Be sure to leave enough slack in your diverting hose. You want to be able to remove the bottle without having to disconnect the hose.

2 Remove the Bottle Holder




Remove the 3 phillips head screws that secure the bottle holder to the base. Set the 3 screws to the side for later use.

4 Install the New Bottle



Set the new Urine Diverting Bottle into the new bottle holder. Mount the bowl back onto the base. Lower the bowl and close the latches on each side of the toilet.

5 Inspect the Bottle Seal

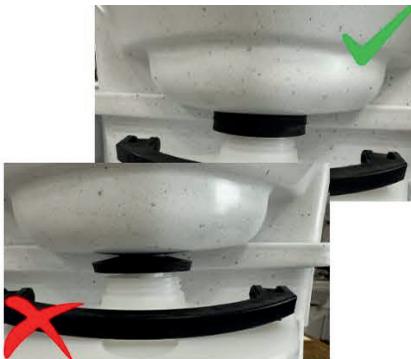

Check that the seal is adequate: check with the bowl latched on each side and gently twist the urine bottle from side to side to ensure there is some resistance.

You should also observe where the bottle seal contacts the urine bottle. If there is a gap, you will need to add the second bottle seal that was provided with the kit. This slides directly onto the bowl's urine spout.

QUICK TIPS

- We recommend starting with one bottle seal and adding the second one if necessary.
- Newer toilets require two bottle seals, but older toilets may not.
- Ensure the hose is cut straight. If cut at an angle, it will not seal properly when inserted into the fitting

6 Inspect the Brass Swivel Fitting



The Nature's Head Urine Diverting Kit comes with a Brass Swivel Fitting pre-installed. The fitting is a push lock fitting, meaning no clamps are required. Simply push the end of the hose into the fitting until it bottoms out. (approximately 1 inch)

To remove the hose from the fitting, simply push the collar that surrounds the hose towards the body of the fitting until it touches. Pull the hose out while continually holding the collar against the body of the fitting.

Emptying the Solids Bin with the New Diverter Installed

1 Removing the Solids Bin

To empty the solids bin, simply unlatch the bowl section. Lift the bowl enough to install the bottle cap on the urine bottle. Then lift the urine bottle out of the holder and set it off to the side.

DO NOT remove the hose from the urine bottle. With the cap in place, this is a sealed assembly and can even be sat on its side without leakage.

- Converting to a urine-diverting system returns you to a holding tank setup. While solid waste can be stored long-term, urine stored over time will produce odors.
- When the toilet isn't in regular use, pour a cup of water (or water mixed with a urine neutralizer like vinegar or a urine digester) into the urine hole or directly into the bottle. This flushes residual urine and helps keep the system odor-free.

2 Returning the Solids Bin

Once the solids bin has been emptied, simply place it back on the floor in between the mounting brackets. Set the urine bottle back into the bottle holder, ensuring to remove the urine bottle cap once correctly seated into the holder. You can now return the bowl to the closed position and latch both sides.